



PUBLIC SWIMMING POOLS WELLNESS AREAS **SPAS THALASSOTHERAPY &** BALNEOTHERAPY **HYDROTHERAPY**

U GERMI® **ULTRA NATURAL TECHNOLOGY** www.uvgermi.fr

UVDECHLO CD300 ECOENERGY Flow rate: from 100 to 200 m³/h



REF: 23000126

Automatic control using chloramine concentrations*

The UVDECHLO CD300 reduces the level of combined chlorine in swimming pools through a photochemical action on all organochlorine compounds found in the water (monochloramine, dichloramine trichloramine). It also destroys Giardia and Cryptosporidum.

TECHNICAL SPECIFICATIONS

UV LAMP

Total electrical power:	900 Watts (3 lamps)	
UV dose at the end of lamp service	e life: 60 mJ/cm ²	
Lamp service life: 16	6,000 hours or 2 years	

UV REACTOR

Treatment chamber:	Stainless steel 316L
Input/Output:	DN 150/PVC 160
Operating pressure:	2 bars



Equipment approved by the Ministry of Health under No. 050021

ELECTRICAL CABINET

Dimensions (mm):	500 x 500 x 250
Power supply:	400 V
Display: Hour counter / Stop-start counter / Lamp replacement pre-alarm & alarm / Lamp defect / Chloramine level control (*analyser not supplied)	


ASSOCIATED PRODUCTS

300 W UV lamp:	23000232
Quartz sleeve:	14000089
Seals (x 2):	14000088

UVDECHLO CD300 ECOENERGY

Flow rate: from 100 to 200 m³/h

REF: 23000126

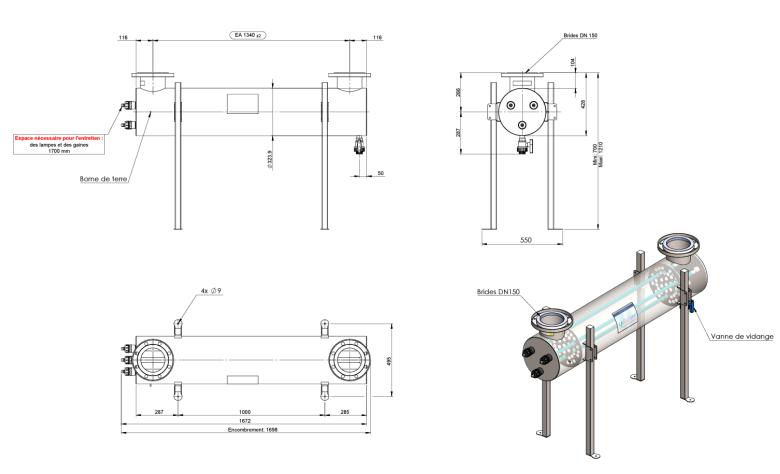

INSTALLATION

The dechloramination unit must be installed horizontally: water flow can be in either direction, but we recommend that the water flows in from the top and out from the top of the unit to avoid any accumulation of air in the treatment chamber and to ensure that it always remains full of water. Sufficient clearance must be provided along the dechloramination unit (1.70 m) to allow for maintenance and UV lamp replacement.

Filtration is required to remove suspended solids. The dechloramination unit is therefore installed after the pool filters, but before chlorine injection as the chlorine molecules can be degraded by UV radiation.

MAINTENANCE

Loss of efficiency occurs when the UV lamps reach the end of their service life (after 2 years of operation) or if one of them becomes defective. They must be replaced. The quartz sleeves make lamp replacement much easier: the unit does not have to be drained or dismantled. The dechloramination unit is equipped with several lamps, which must all be replaced at the same time.

The quartz sleeves may become clogged and should be cleaned once a year with a mild acid. Seals on the quartz sleeves must be replaced every time they are dismantled, and at least every two years.



UVGERMI SA, ZAC de la Nau, 19240 Saint-Viance, France | Tel: +33 (0) 555 881 888 | Email: contact@uvgermi.fr

www.uvgermi.fr Din f 🖸